YOR 920040080USI Kwark TAD

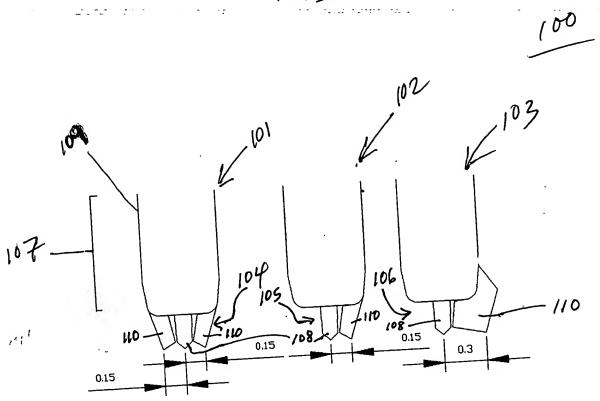


FIGURE 1

YOR 920040080US/ Kwark TAD

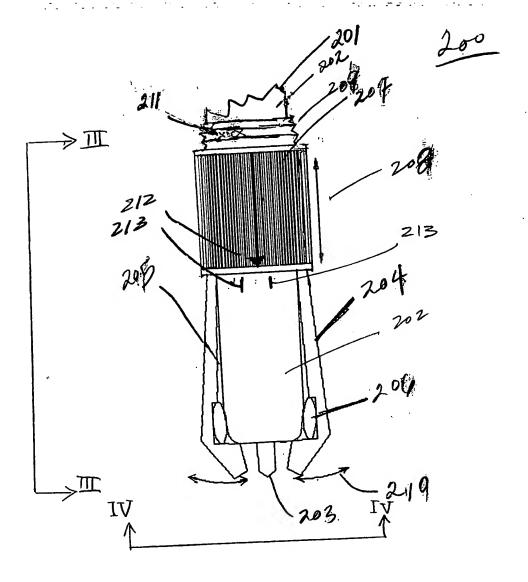


FIGURE 2

YOR920040080USI

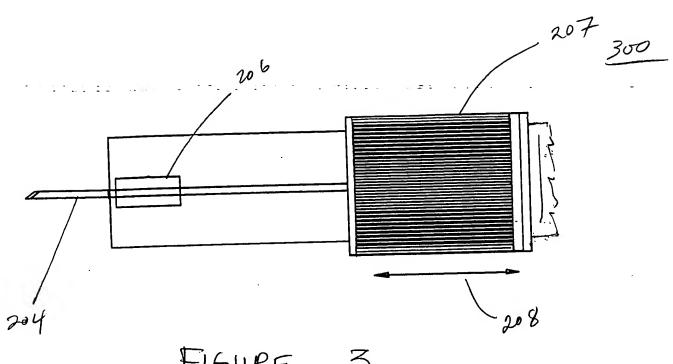


FIGURE 3

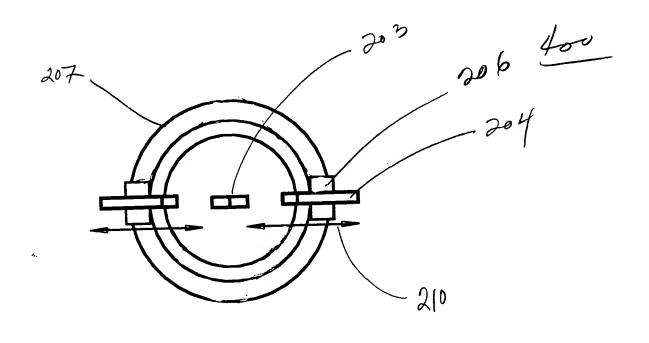


FIGURE 4

YOK 920040080USI 301 - Attach Peripheral Probe (2) 204 outer wall 222 SOZ - Incorporate Thread Interface Install - Sleeve 207 504 - Tristall Flexible Member 2016

FIGURE 5

YOR 9200 40080 USI 601-2 Make Coarse Adjustment 2 Apply Probe To Test Points

FIGURE 6